

PRODUCT AND MEASURING GUIDE

ARROW SOFT FABRIC ROMAN BLINDS

ARROW 

curtains + blinds + shutters + fabrics + outdoor blinds + awnings

SHOWROOM
22 Liddiard Street
Hawthorn VIC 3122

P +613 9819 1484
M +614 0284 1310
F +613 8677 1179

What will you need?

1. Tape measure (metal ones are best)
2. Pen and paper or Arrow order form
3. All measurements to be in Millimeters (mm)

Face Fit or Recess Fit?

Face Fit – This is when you want the blind to hang outside the window recess or on the window frame. It is advisable to have Soft Roman Blinds face fitted as oppose to Recess fitted.

Recess fit – This is when you want the blind to fit inside the window recess/Frame.

Handy Hints

When measuring, always look out for things like window handles or tiles and take their position into account if necessary. This is so you can be sure of the perfect fit.

All our blinds can be fitted into the face of your window frame or wall, or into the top of the ceiling. This gives you complete control over the positioning of your blind.


Things to keep in mind – Soft Roman blinds

1. All Soft Roman blinds come with full block out white colour backing cloth.
2. The fabric used is a soft fabric so they will expand and contract with heat and cold
3. For warranty purposes it is advisable to split blinds in 2 parts if the total width is more than 2200. Fabric pattern will be matched in split blinds.

6 SIMPLE STEPS TO RECESS FIT

Follow these instructions if you want the blind to hang inside the window recess or Window Frame:

1. Measure the width of the recess from inside the frame. Note down the shortest measurement.
2. Measure the drop of the recess to the windowsill. Note down the shortest measurement
3. Please note if there is a handle that can prompt the drop of the Blind, than use the face fit option.
4. Control for the blind can be right or Left. While facing the window determine which side you would like to have the control operation and note it on the order form.
5. Double check all the measurements and note it down in Arrow Order Form.
6. If you miss something or are unable to understand please feel free to give us a call on 03 9819 1484 or ask for a measuring rep to come in. Call out charges \$50 for Melbourne Metro.

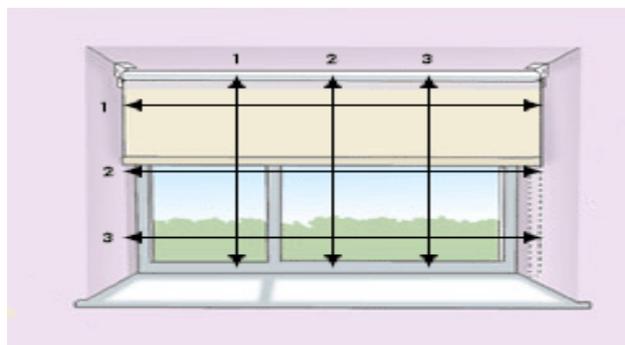

Standard Allowance

In order for your blind to hang properly we do standard reductions in your measurements.

Customers are requested NOT to deduct any allowance as it will be done at manufacturing end.

RECESS FIT BLINDS:

Width: 10 mm

Drop: 10 mm

5 SIMPLE STEPS TO A FACE FIT

For all types of blinds follow these instructions if you want your blind to hang outside the window recess or Frame:

1. Measure the exact width from one end of the frame to the other end. Add 50 mm to the width in order to cut additional light.
2. Measure the exact drop from the top of the frame to the bottom where the frame ends. Add 50 mm to the width in order to cut additional light.
3. Control for the blind can be right or left. While facing the window determine which side you would like to have the control operation and note it on Arrow order form.
4. Double check all the measurements and input them online to get prices.
5. If you miss something or are unable to understand please feel free to give us a call on 03-9819 1484 or ask for a measuring rep to come in. Call out charges \$50 for Melbourne Metro.

